



Illustrated Parts List

Model Series

120200

TYPE NUMBERS
0101 through 3708.












TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	6
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	7
Fuel Supply	4
Gear Reduction	7
Governor Spring	6
Ignition	6
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	7




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

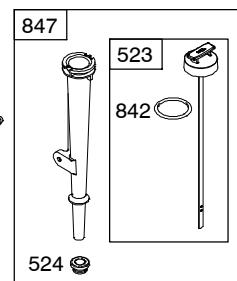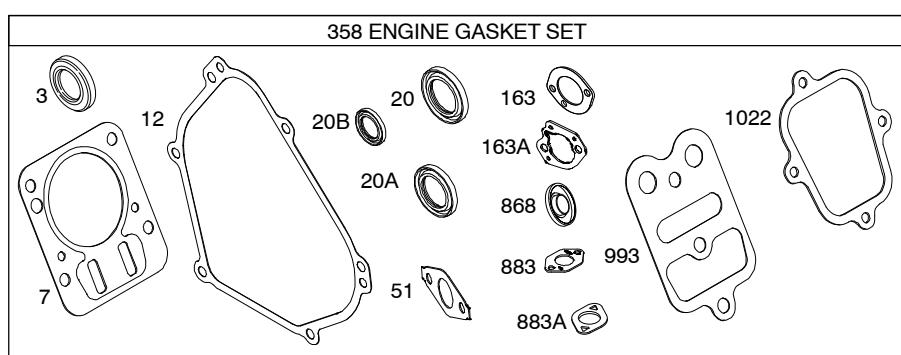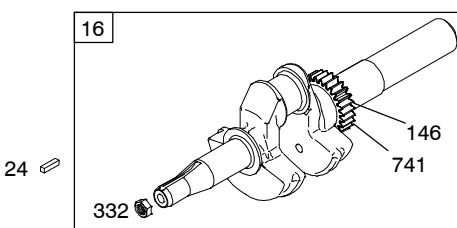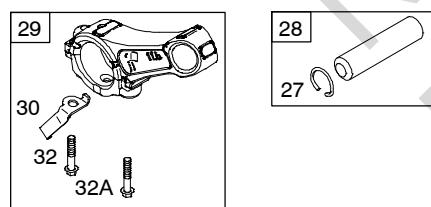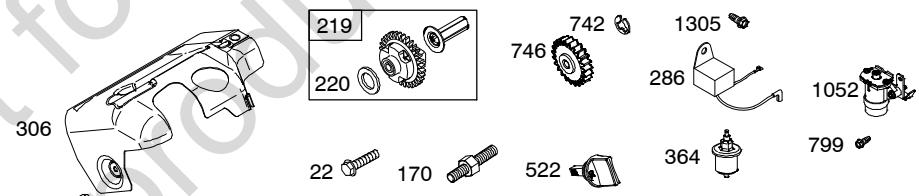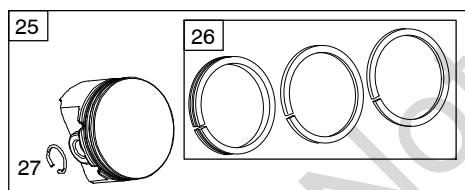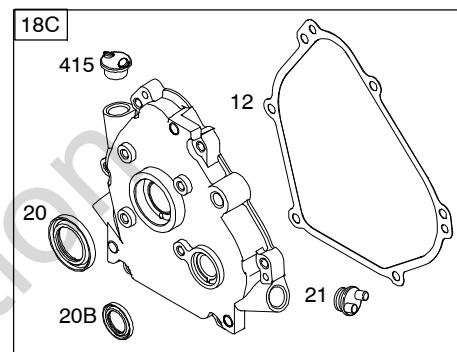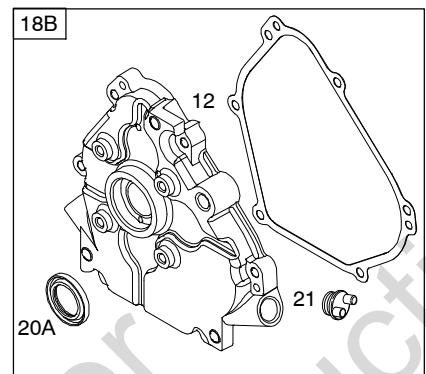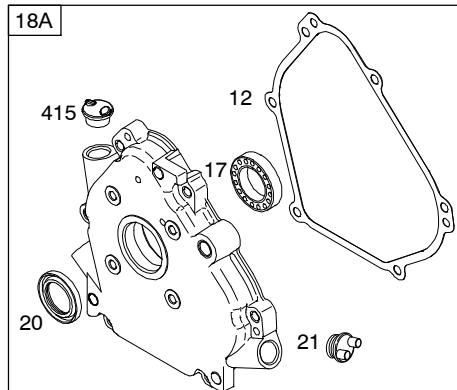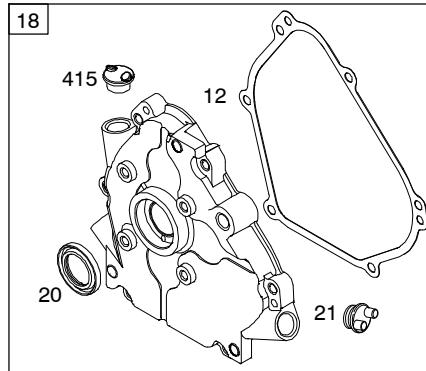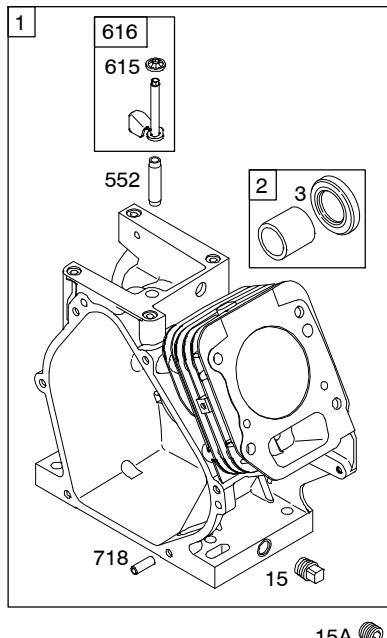

3243-2 *Assemblies include all parts shown in frames.* **02/02/00**

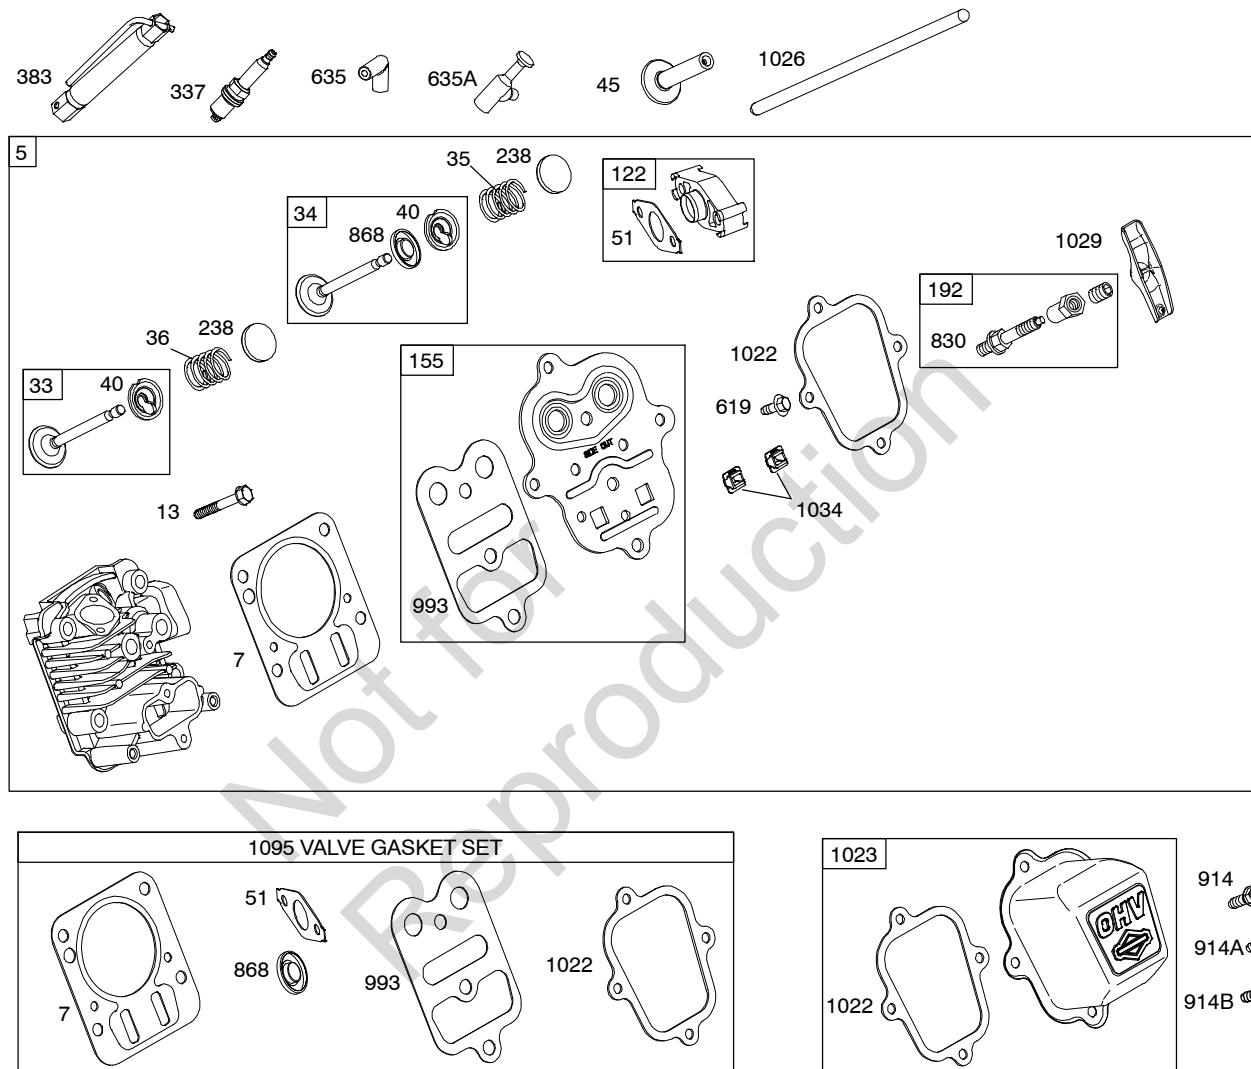


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3243-3 Assemblies include all parts shown in frames.






02/02/2009

125


NOTE: This Illustration Represents Several Carburetors. Parts Shown May Not Be Included In All Kits.

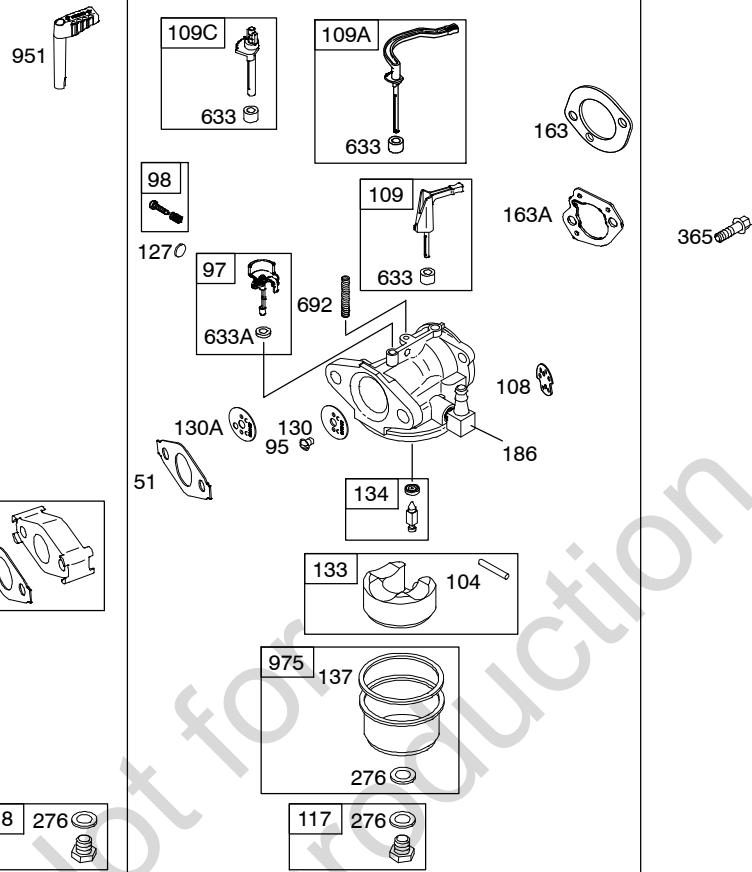

121 CARBURETOR OVERHAUL KIT

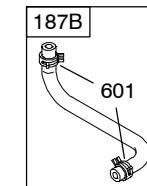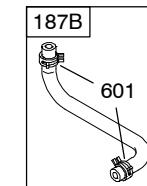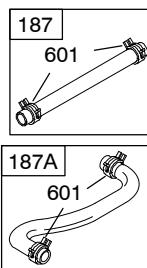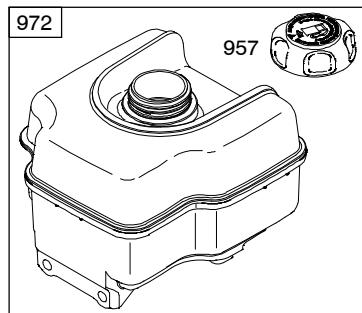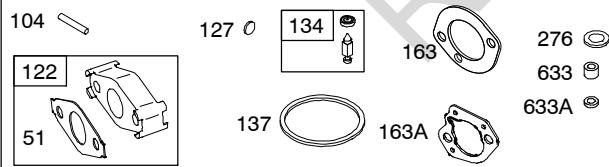

977 CARBURETOR GASKET SET

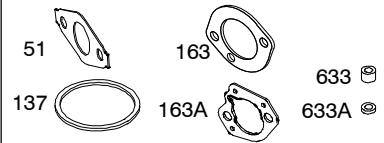


190 240 958

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3243-4


Assemblies include all parts shown in frames.

02/02/2009

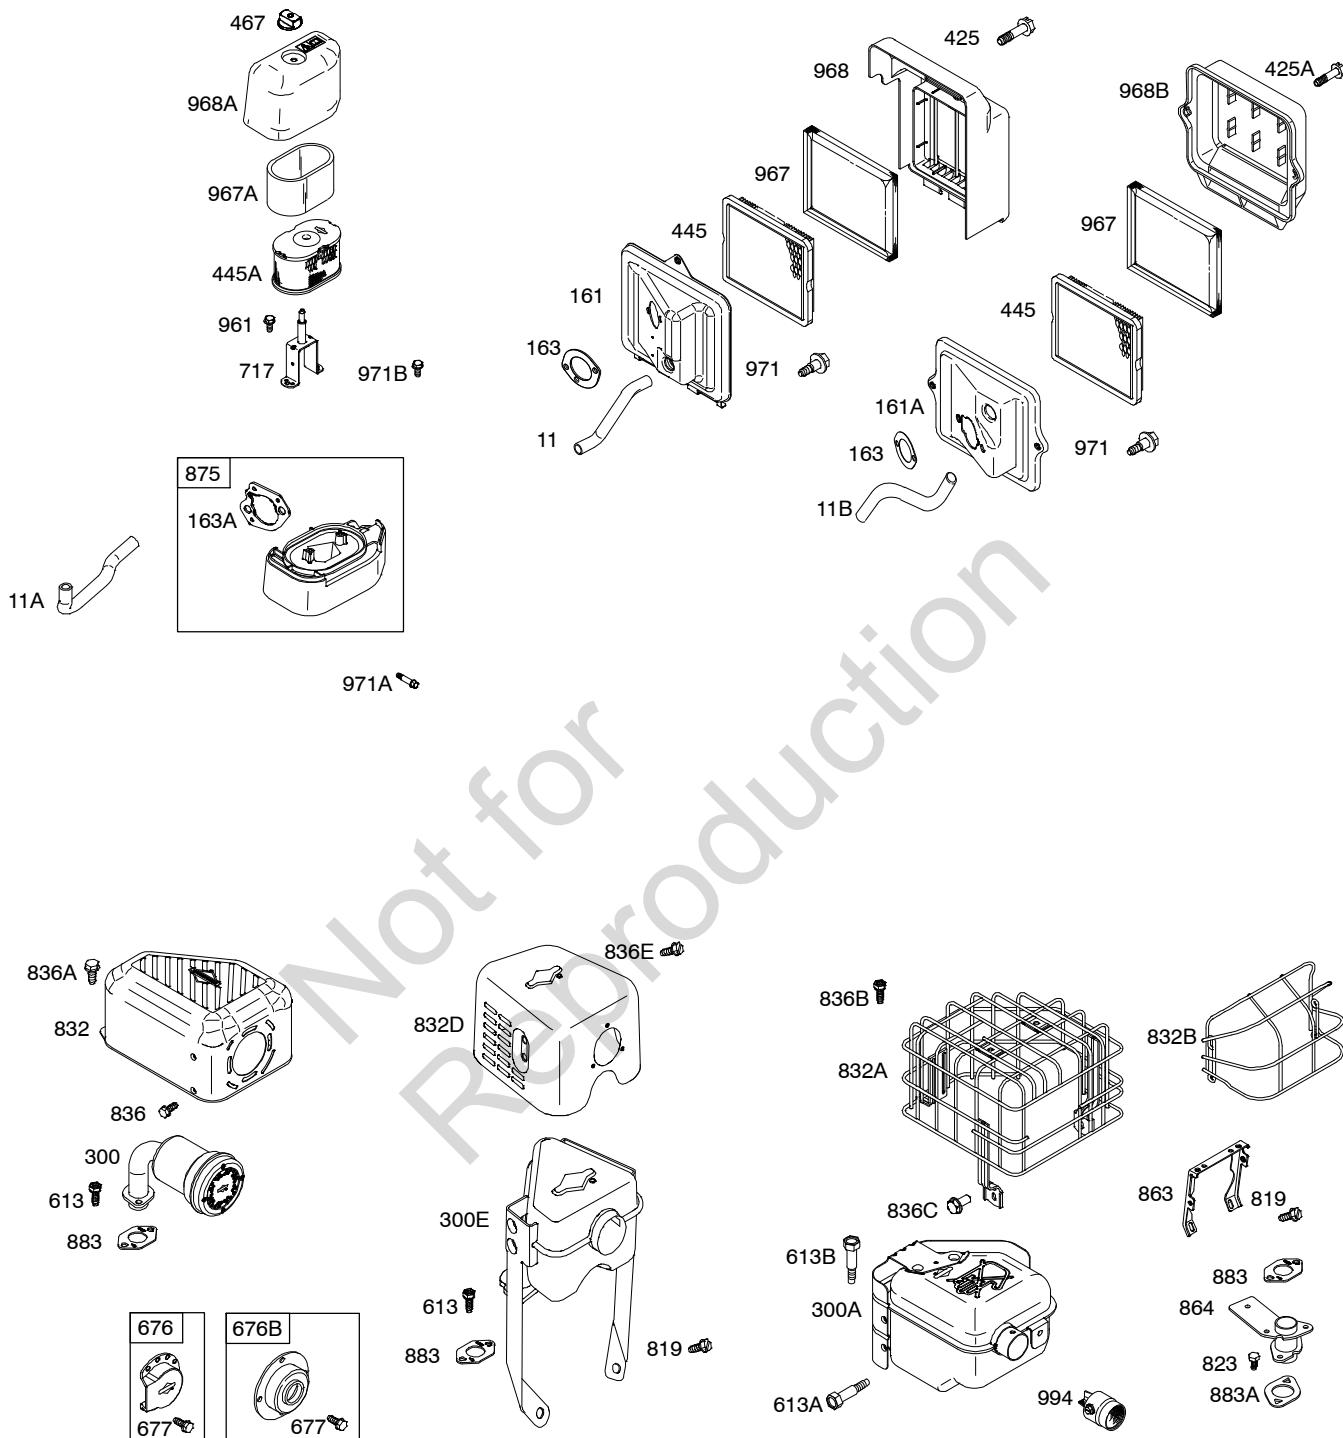

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3243-5 Assemblies include all parts shown in frames.




02/02/2009

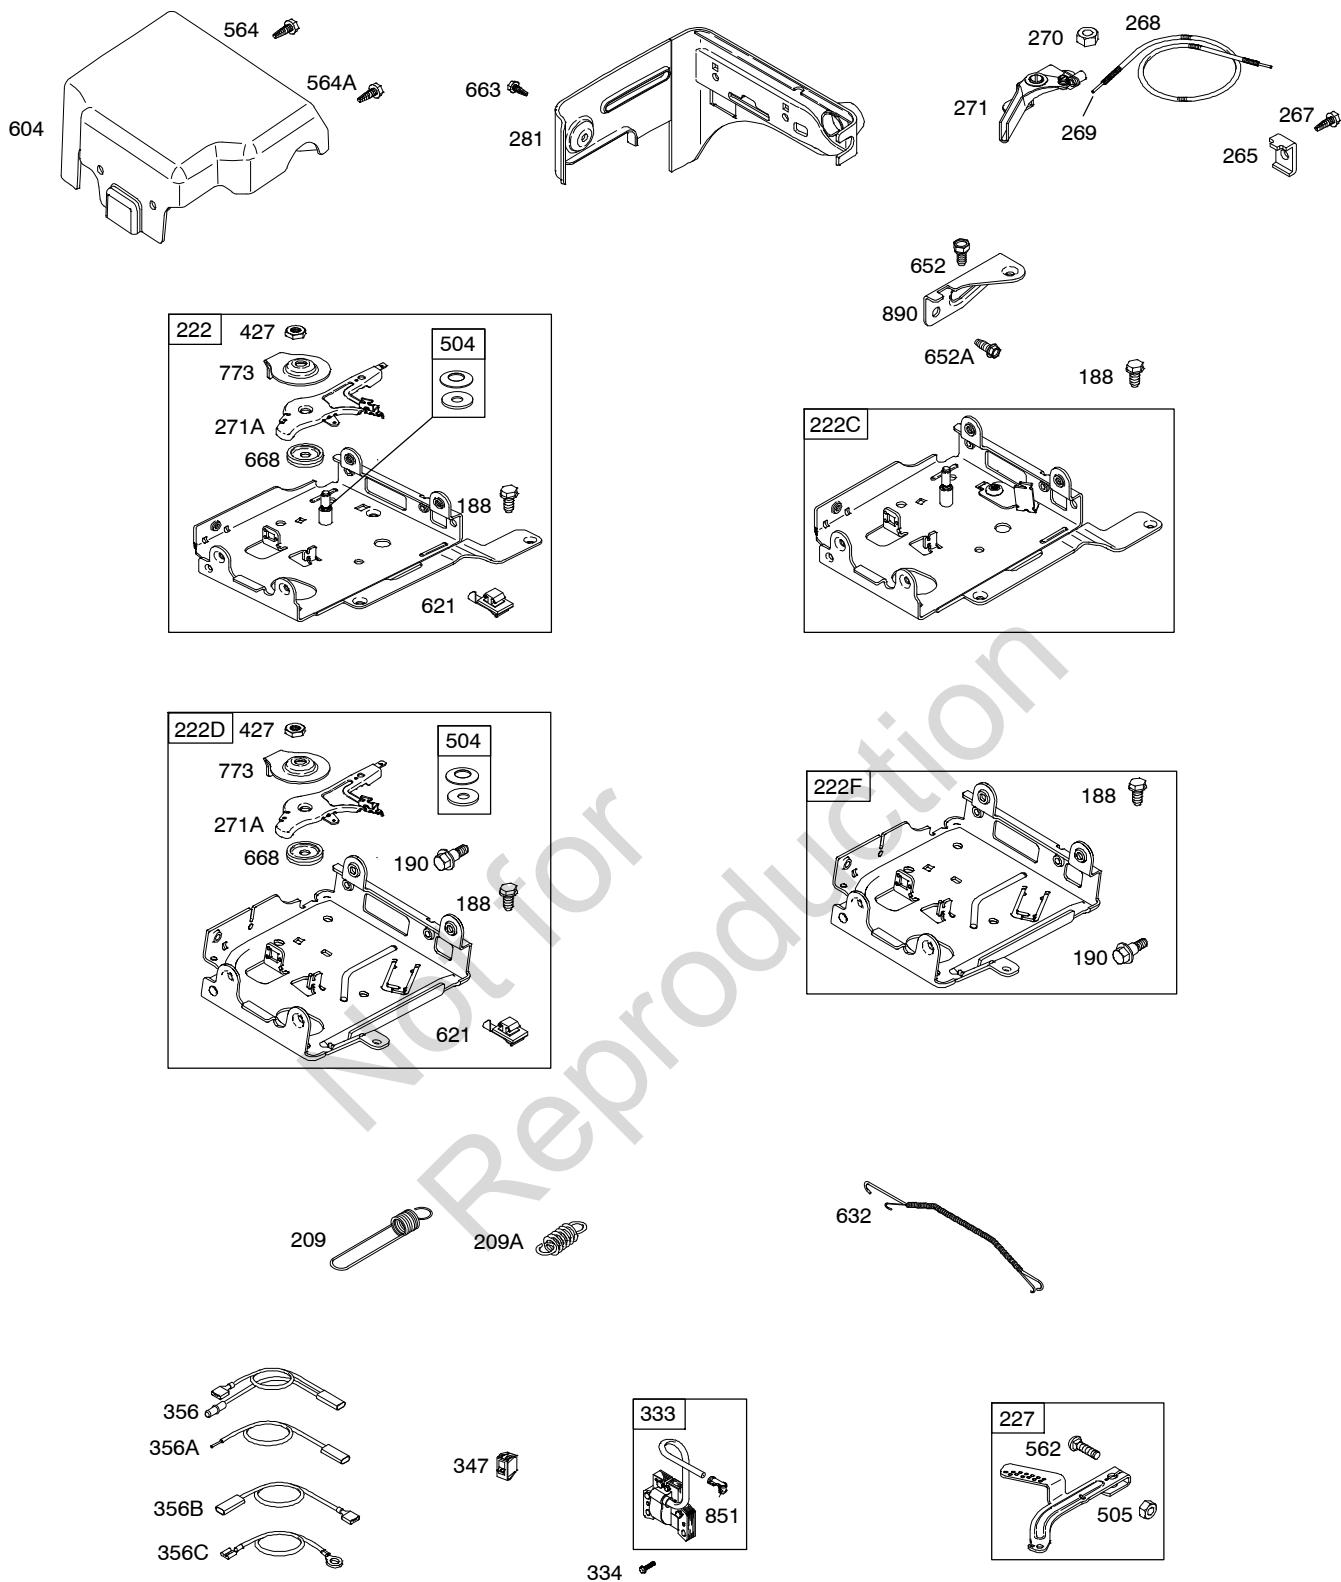

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3243-6

Assemblies include all parts shown in frames.

02/02/2009

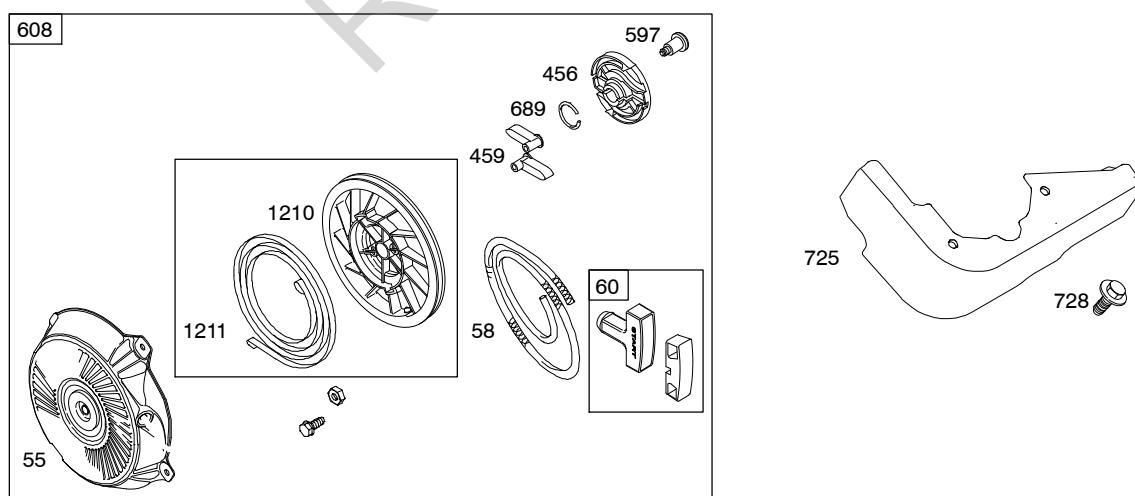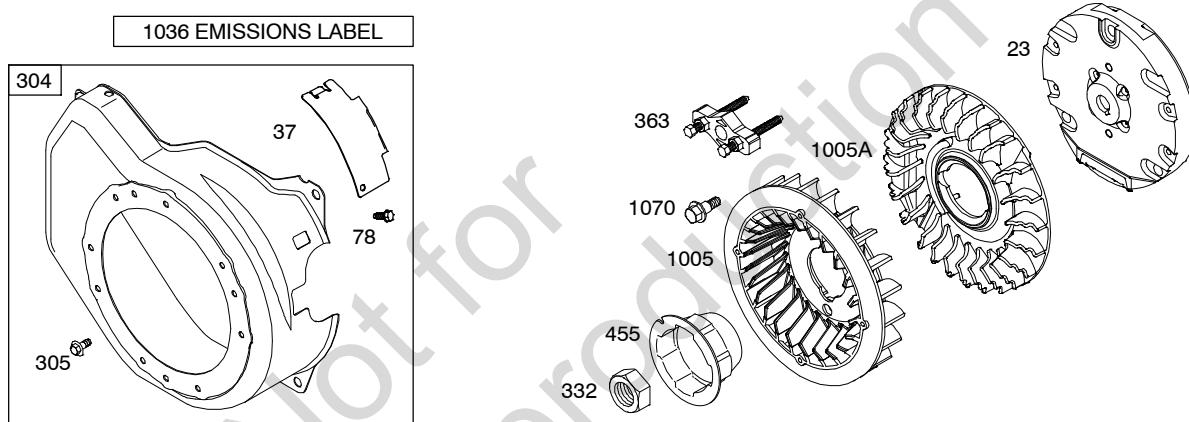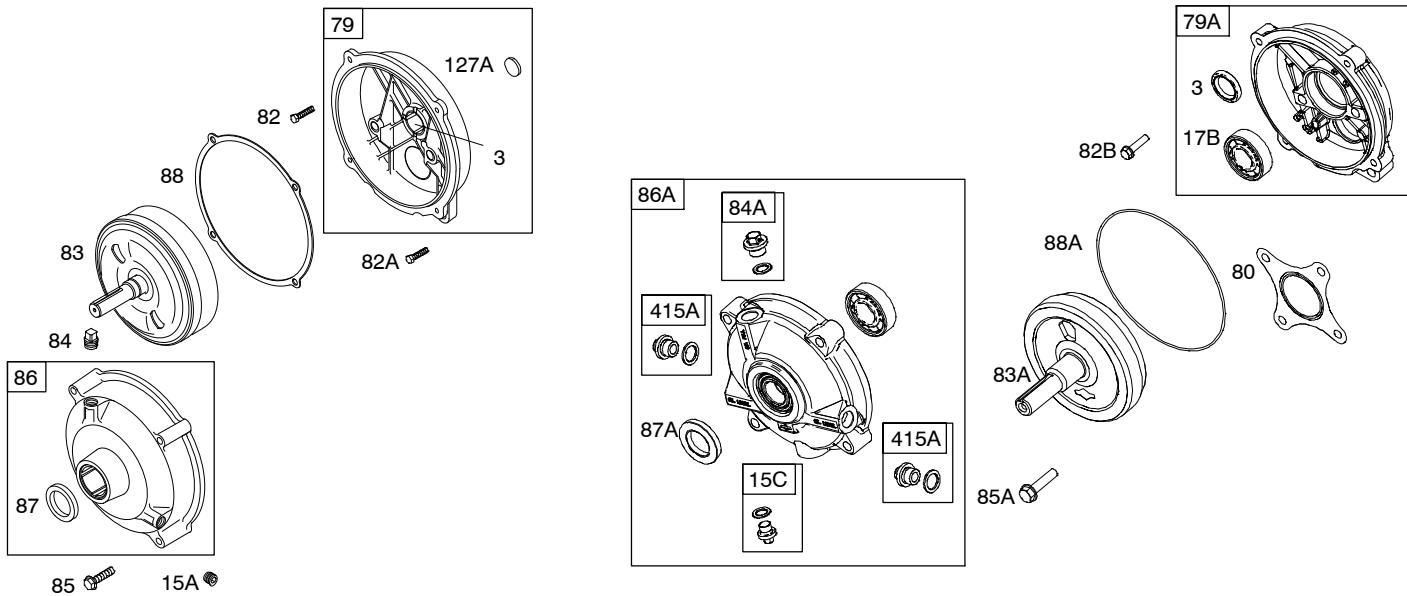

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3243-7

Assemblies include all parts shown in frames.

02/02/2009

120200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	699510	Cylinder Assembly	16	699452	Crankshaft Used on Type No(s). 0354, 0534.	18	699804	Cover-Crankcase Used on Type No(s). 0060, 0101, 0111, 0112, 0114, 0115, 0118, 0119, 0121, 0123, 0127, 0129, 0131, 0133, 0134, 0135, 0140, 0141, 0142, 0143, 0354, 0360, 0399, 0523, 0528, 0534, 0549, 0560.	
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			----- Note -----	
3	★299819S	Seal-Oil (Magneto Side)		699449	Crankshaft Used on Type No(s). 0360, 0387, 0399, 0560.		699696	Cover- Crankcase Used on Type No(s). 0128, 0387, 0417, 0422, 0475, 0770, 0780, 3780.	
5	699486	Head-Cylinder		699445	Crankshaft Used on Type No(s). 0101, 0114, 0121, 0129, 0133, 0134, 0141, 0142, 0143, 0417, 0422, 0475, 0523, 0570, 0770, 0780, 3780.		699804	Cover- Crankcase (Used After Code Date 07070200).	
7	★Ø698210	Gasket-Cylinder Head		699447	Crankshaft Used on Type No(s). 0115, 0117, 0118, 0119, 0126, 0127.		18A	699672	Used on Type No(s). 0117, 0126.
11	692600	Tube-Breather (Flat Panel Air Cleaner)		699443	Crankshaft Used on Type No(s). 0116, 0125, 0132, 0139, 0536.		18B	699761	Cover-Crankcase (Used Before Code Date 06051700). Used on Type No(s). 0111.
11A	693647	Tube-Breather (High Mount Air Cleaner)		792883	Crankshaft (Used After Code Date 06051600). Used on Type No(s). 0111, 0112, 0135, 0140, 0549.		18C	699677	Cover-Crankcase Used on Type No(s). 0570.
11B	790632	Tube-Breather (Ultra Low Air Cleaner)		699444	Crankshaft (Used Before Code Date 06051700). Used on Type No(s). 0111.		20	★692550	Seal-Oil (PTO Side)
12	★699485	Gasket-Crankcase		699441	Crankshaft Used on Type No(s). 0136, 0138, 0528, 0535.		20A	★694171	Seal-Oil (PTO Side)
13	699482	Screw (Cylinder Head)		699451	Crankshaft Used on Type No(s). 0060, 0123, 0128, 0131.		20B	★691952	Seal-Oil (PTO Side)
15	691686	Plug-Oil Drain (Square Head)							
15A	691682	Plug-Oil Drain (Flush)							
15C	792750	Plug-Oil Drain	17	692517	Bearing-Ball				
			17B	99158	Bearing-Ball				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3243-8

Assemblies include all parts shown in frames.

02/02/2009

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
21	281658S	Cap-Oil Fill	40	692194	Retainer-Valve	60	490652	Grip-Starter Rope (2 Piece)
22	699478	Screw (Crankcase Cover/ Sump)	45	690977	Tappet-Valve	78	699205	Screw (Flywheel Guard)
23	699488	Flywheel	46	693404	Camshaft	79	694511	Case-Gear Reduction (Used Before Code Date 06051700).
24	222698S	Key-Flywheel	46A	694831	Camshaft	79A	792746	Case-Gear Reduction (Used After Code Date 06051600).
25	791968	Piston Assembly (Standard)	51★◆Ø692555		Gasket-Intake	80	792755	Gasket-Gear Case
		----- Note -----	55	791848	Housing-Rewind Starter (Used After Code Date 08030200).	82	690369	Screw (Gear Reduction Case) (Used Before Code Date 06051700).
26	791969	Ring Set (Standard) (Used After Code Date 05060600).			----- Note -----	82A	790197	Screw (Gear Reduction Case) (Used Before Code Date 06051700).
		----- Note -----			691422 Housing- Rewind Starter (Used Before Code Date 08030300). (Rewind Starter Parts Used With 3MM Diameter Starter Rope)	82B	792753	Screw (Gear Reduction Case) (Used After Code Date 06051600).
		499631 Ring Set (Standard) (Used Before Code Date 05060700).			791848 Housing- Rewind Starter (Used Before Code Date 08030300). (Rewind Starter Parts Used With 5MM Diameter Starter Rope)	83	690374	Shaft-Auxiliary Drive (Used Before Code Date 06051700).
		791324 Ring Set (.020" Oversize) (Used After Code Date 05060600).	58	693389	Rope-Starter (Used After Code Date 08030200).	83A	792756	Shaft-Auxiliary Drive (Used After Code Date 06051600).
		692786 Ring Set (.020" Oversize) (Used Before Code Date 05060700).			----- Note -----	84	691121	Plug-Breather
27	691866	Lock-Piston Pin			693389 Rope-Starter (Used Before Code Date 08030300). (Rewind Starter Parts Used With 3MM Diameter Starter Rope)	84A	792759	Plug-Breather
28	499423	Pin-Piston			66574 Rope-Starter (Used Before Code Date 08030300). (Rewind Starter Parts Used With 5MM Diameter Starter Rope)	85	692551	Screw (Gear Cover to Gear Reduction) (Used Before Code Date 06051700).
29	690124	Rod-Connecting				85A	690711	Screw (Gear Cover to Gear Reduction) (Used After Code Date 06051600).
30	791584	Dipper-Connecting Rod						
32	691664	Screw (Connecting Rod)						
32A	695759	Screw (Connecting Rod)						
33	499642	Valve-Exhaust						
34	499641	Valve-Intake						
35	691304	Spring-Valve (Intake)						
36	691304	Spring-Valve (Exhaust)						
37	699661	Guard-Flywheel						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
86	690608	Cover-Gear (Used Before Code Date 06051700).	118	498975	Jet-Main (High Altitude) ----- Note -----	133	398187	Float-Carburetor
86A	795647	Cover-Gear (Used After Code Date 08010100). ----- Note -----		695042	Jet-Main (High Altitude) Used on Type No(s). 0115, 0117, 0118, 0127.	134	•398188	Kit-Needle/Seat
	792748	Cover-Gear (Used After Code Date 06051600 and Before Code Date 08010200).		494870	Jet-Main (High Altitude) Used on Type No(s). 0114, 0121.	137	••693981	Gasket-Float Bowl
87	691582	Seal-Gear Reduction (Used Before Code Date 06051700).		497466	Jet-Main (High Altitude) Used on Type No(s). 0119, 0126.	146	690979	Key-Timing
87A	792752	Seal-Gear Reduction (Used After Code Date 06051600).	121	792006	Kit-Carburetor Overhaul	155	*698214	Plate-Cylinder Head
88	691600	Gasket-Gear Reduction Cover	122	★693749	Spacer-Carburetor	161	699207	Base-Air Cleaner (Flat Panel Air Cleaner)
88A	792760	Gasket-Gear Reduction Cover	125	791077	Carburetor ----- Note -----	161A	790631	Base-Air Cleaner (Ultra Low Air Cleaner)
95	691636	Screw (Throttle Valve)		697028	Carburetor Used on Type No(s). 0114, 0121.	163★•◆696024		Gasket-Air Cleaner (Flat Panel Air Cleaner)
97	690024	Shaft-Throttle		696981	Carburetor Used on Type No(s). 0060, 0101, 0111, 0112, 0116, 0123, 0125, 0128, 0129, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0523, 0535, 0536, 0549, 0570.	163A★•◆792870		Gasket-Air Cleaner (High Mount)
98	398185	Kit-Idle Speed (Carburetor)		698860	Carburetor Used on Type No(s). 0119, 0126.	186	692317	Connector-Hose
104	•691242	Pin-Float Hinge		791991	Carburetor Used on Type No(s). 0115, 0117, 0118, 0127.	170	699818	Stud (Crankcase Cover)
108	692567	Valve-Choke	127	•691739	Plug-Welch	187	791766	Line-Fuel (Cut to Required Length)
109	690023	Shaft-Choke	127A	691585	Plug-Welch	187A	791867	Line-Fuel (Molded)
109A	693628	Shaft-Choke	130	691181	Valve-Throttle	187B	791874	Line-Fuel (Molded)
109C	790624	Shaft-Choke	130A	691203	Valve-Throttle Used on Type No(s). 0115, 0117.	188	699479	Screw (Control Bracket)
117	498978	Jet-Main (Standard) ----- Note -----				190	699220	Screw (Fuel Tank)
	691428	Jet-Main (Standard) Used on Type No(s). 0115, 0117, 0118, 0127.	127	•691739	Plug-Welch	192	694543	Adjustor-Rocker Arm
	697355	Jet-Main (Standard) Used on Type No(s). 0114, 0121.	127A	691585	Plug-Welch	209	692571	Spring-Governor ----- Note -----
	498975	Jet-Main (Standard) Used on Type No(s). 0119, 0126.	130	691181	Valve-Throttle	693206		Spring-Governor
			130A	691203	Valve-Throttle Used on Type No(s). 0115, 0117.	Used on Type No(s). 0060, 0115, 0117, 0118, 0123, 0126, 0127, 0129, 0131, 0133, 0134, 0136, 0138, 0142, 0143, 0523, 0535, 0570.		
						693710		Spring-Governor
						0114.		
						209A	691278	Spring-Governor

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
219	693578	Gear-Governor	281	793122	Panel-Control	427	694255	Nut (Control Bracket)
220	691724	Washer (Governor Gear)	286	794185	Module-Oil Sensor	445	491588S	Filter-Air Cleaner Cartridge (Flat Panel)
222	699589	Bracket-Control (Used Before Code Date 06051500).	287	699629	Screw (Dipstick Tube)	445A	697029	Filter-Air Cleaner Cartridge (High Mount)
222C	699590	Bracket-Control (Used Before Code Date 06051500). Used on Type No(s). 0115, 0117, 0119. ----- Note ----- 699493 Bracket- Control (Used Before Code Date 06051500). Used on Type No(s). 0118.	300	693593	Muffler	455	692591	Cup-Flywheel
			300A	699231	Muffler	456	692299	Plate-Pawl Friction
222D	793107	Bracket-Control (Used After Code Date 06051400).	300E	791595	Muffler	459	281505S	Pawl-Ratchet
			304	699598	Housing-Blower	467	691668	Knob-Air Cleaner
222F	793100	Bracket-Control (Used After Code Date 06051400). Used on Type No(s). 0115, 0117, 0118, 0119, 0126, 0127.	305	699480	Screw (Blower Housing)	504	694254	Washer Set-Friction
			306	693610	Shield-Cylinder	505	691251	Nut (Governor Control Lever)
227	692573	Lever-Governor Control	307	699483	Screw (Cylinder Shield)	522	697689	Plug-Dipstick/Fill
			332	792723	Nut (Flywheel)	523	693618	Dipstick ----- Note ----- 790546 Dipstick Used on Type No(s). 0360, 0399, 0528, 0560.
228	691300	Valve-Cap	333	695711	Armature-Magneto	524	281370S	Seal-Dipstick Tube
			334	699477	Screw (Magneto Armature)	544	692966	Armature-Starter
229	394358S	Filter-Fuel	337	491055S	Plug-Spark (Resistor)	552	692346	Bushing-Governor Crank
			----- Note ----- 691043 Plug-Spark (EMS)			562	691119	Bolt (Governor Control Lever)
230	691024	Clamp-Casing	347	698338	Switch-Rocker	564	699491	Screw (Control Cover)
			----- Note ----- 697854 Switch-Rocker Used on Type No(s). 0118, 0119, 0127.			564A	699206	Screw (Control Cover)
231	699492	Screw (Casing Clamp)	356	693651	Wire-Stop	597	691696	Screw (Pawl Friction Plate)
			356A	692390	Wire-Stop	601	791850	Clamp-Hose
232	691025	Casing-Control Wire (Cut to Required Length)	356B	692602	Wire-Stop	604	697326	Cover-Control
			356C	695630	Wire-Stop			
233	691026	Wire-Control (Cut to Required Length)	358	791797	Gasket Set-Engine			
			363	19203	Puller-Flywheel			
234	691027	Nut (Control Wire Casing)	364	695693	Terminal-Oil Plug			
			365	699484	Screw			
235	691028	Lever-Control	383	19374S	Wrench-Spark Plug			
			415	693463	Plug			
236	271A	Lever-Control	415A	792749	Plug			
			425	699208	Screw (Air Cleaner Cover)			
237	694256	Lever-Control	425A	699492	Screw (Air Cleaner Cover)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

120200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	795930	Starter-Rewind (Used After Code Date 08030200). ----- Note ----- 693394 Starter-Rewind (Used Before Code Date 08030300). (Rewind Starter Parts Used With 3MM Diameter Starter Rope)	663	699206	Screw (Control Panel)	842	691031	Seal-O Ring (Dipstick Tube)
		668	694257	Spacer	847	693617	Dipstick/Tube Assembly ----- Note -----	
		676	393757	Deflector-Muffler	790545	Dipstick/Tube Assembly Used on Type No(s). 0326, 0399, 0528, 0560.		
		676B	395700	Deflector-Muffler	851	493880S	Terminal-Spark Plug	
		677	690661	Screw (Muffler Deflector)	863	699229	Bracket-Muffler	
		689	691855	Spring-Friction	864	699232	Adapter-Muffler	
		692	690572	Spring-Detent	868	★Ø692044	Seal-Valve	
		717	693462	Bracket-Air Cleaner	875	697030	Base-Air Cleaner (High Mount)	
		718	690959	Pin-Locating	883	★691893	Gasket-Exhaust	
		725	792874	Shield-Heat	883A	★692237	Gasket-Exhaust	
		728	699632	Screw (Heat Shield)	890	790203	Bracket-Support	
		741	692565	Gear-Timing	914	699480	Screw (Rocker Cover) (Bottom)	
		742	692564	Retainer-E Ring	914A	692557	Screw (Rocker Cover) (Top)	
		746	790278	Gear-Idler	914B	697551	Screw (Rocker Cover) (Center)	
		773	694258	Retainer	951	790630	Lever-Choke	
		799	699202	Screw (Oil Sensor)	957	792647	Cap-Fuel Tank (Fresh Start) ----- Note -----	
		819	699233	Screw (Muffler Bracket)	795027	Cap-Fuel Tank (Text Free)		
		823	699209	Screw (Muffler Adapter)	958	698180	Valve-Fuel Shut Off	
		830	694544	Stud-Rocker Arm	961	698304	Screw (Air Cleaner Bracket)	
		832	693583	Guard-Muffler	967	493537S	Filter-Pre Cleaner (Flat Panel)	
		832A	697818	Guard-Muffler	967A	273356S	Filter-Pre Cleaner (High Mount)	
		832B	696516	Guard-Muffler				
		832D	796240	Guard-Muffler (Used After Code Date 08062400). ----- Note -----				
		836	699203	Guard-Muffler (Used Before Code Date 08062500).				
		836A	699632	Screw (Muffler Guard)				
		836B	699209	Screw (Muffler Guard)				
		836C	699234	Screw (Muffler Guard)				
		836E	699755	Screw (Muffler Guard)				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION																															
968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1052	790141	Sensor-Oil	1211	791849	Pulley/Spring Assembly (Spring)																															
968A	693460	Cover-Air Cleaner (High Mount)	1058	277040	Operator's Manual			(Used After Code Date 08030200).																															
968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)	1070	699201	Screw (Flywheel Fan)			----- Note -----																															
971	690370	Screw (Air Cleaner Base)	1095	791798	Gasket Set-Valve		498144	Pulley/Spring Assembly (Spring)																															
971A	690349	Screw (Air Cleaner Base)	1210	791849	Pulley/Spring Assembly (Pulley)			(Used Before Code Date 08030300).																															
971B	699629	Screw (Air Cleaner Base)			(Used After Code Date 08030200).		498144	Pulley/Spring Assembly (Pulley)																															
972	694260	Tank-Fuel			(Rewind Starter Parts Used With 3MM Diameter Starter Rope)			(Rewind Starter Parts Used With 3MM Diameter Starter Rope)																															
975	493640	Bowl-Float			(Used Before Code Date 08030300).		791849	Pulley/Spring Assembly (Spring)																															
977	792006	Gasket Set-Carburetor			(Rewind Starter Parts Used With 3MM Diameter Starter Rope)			(Used Before Code Date 08030300).																															
993	Ø694088	Gasket-Cylinder Head Plate			(Used Before Code Date 08030300).		1005A	794273	Fan-Flywheel	1019	694852	Kit-Label	1022	★Ø691890	Gasket-Rocker Cover	1023	499924	Cover-Rocker Arm	1026	790287	Rod-Push	1029	691230	Arm-Rocker	1034	691343	Guide-Push Rod Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)	1036			1305	699691	Screw (Oil Sensor Module)	1319	794467	Label-Warning	1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

